


FlipCam firmware update installation guide

1. Once you installed the new FlipCam Updater 1.1.0, please open it and you should be able to see the following window popped up.

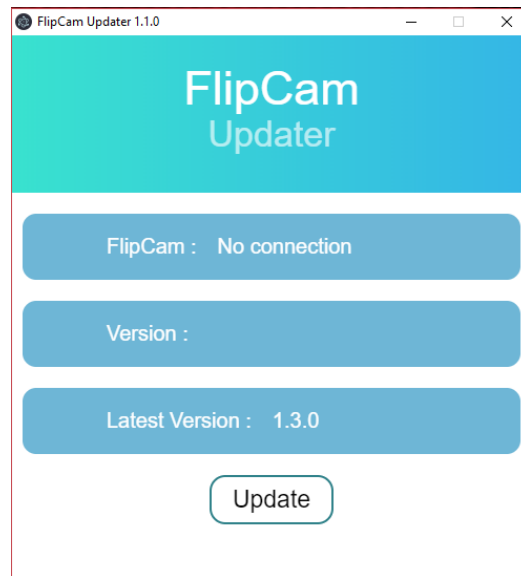


2. Switch on your robot with the wifi module connected, then connect with FlipRobot wifi module wifi network (This is the exact same exercise as you did in FlipAIOT.). You can tell if the FlipRobot wifi network is connected by looking at the FlipCam section below.





- Once the FlipRobot wifi is successfully connected, your current FlipCam version should appear in the middle "Version" box. It should be shown v1.0. If nothing appears, try to disconnect your FlipRobot wifi network and reconnect again. If still nothing appears there, try to close the FlipCam Updater and reopen it again.




- Once current version appears to be v1.0, click on the 'Update' and the following screen will pop up.

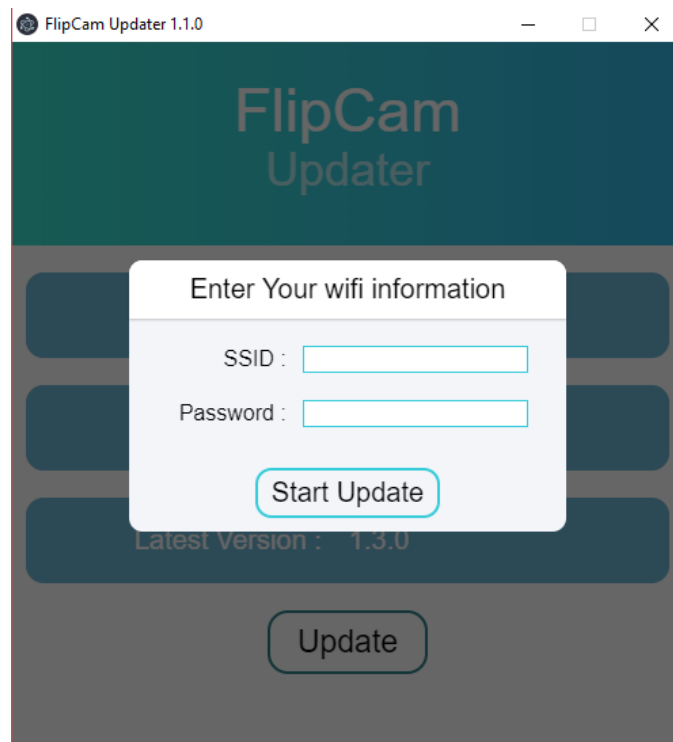

5. Type in your nearby normal wifi access details (in the SSID field, please put in the EXACT name with the right caps of the wifi network you are connecting to.). Then click on 'Start Update'.

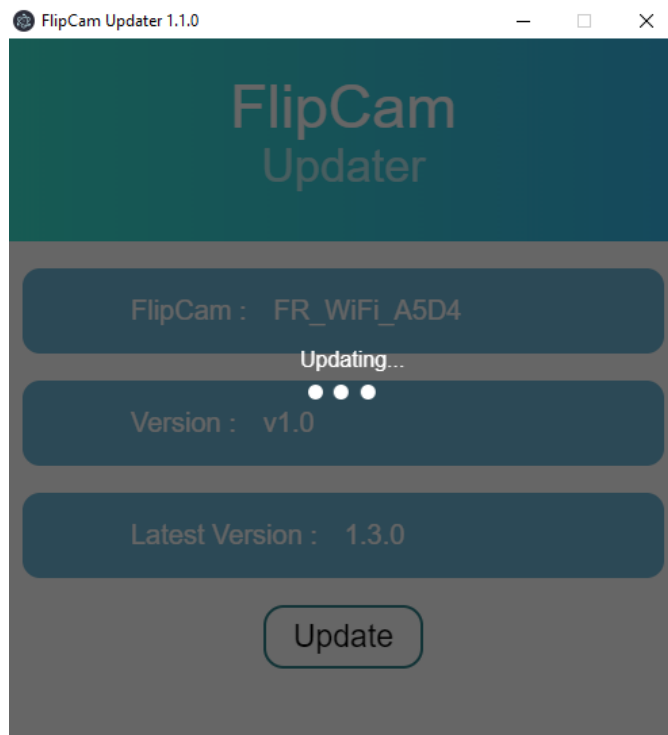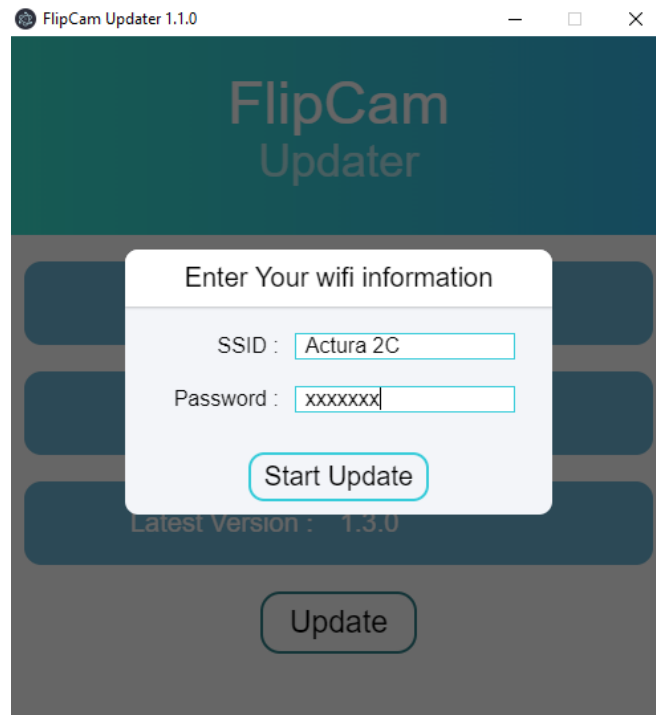

- Once it's done, a message will pop up and say "Update should be done, please restart your E310". Then click on OK and restart your E310+.

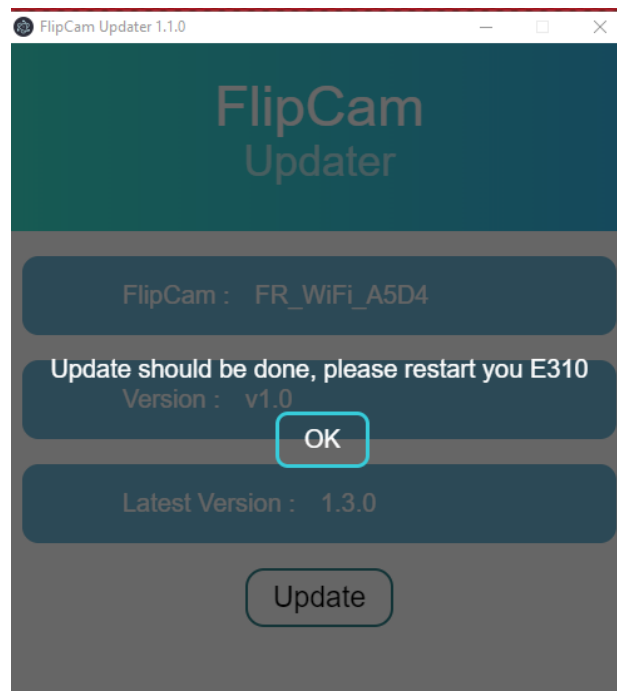

- In the Version section, it should then appear 1.3.0 which is the latest version. if nothing appears, try to disconnect your FlipRobot wifi network and reconnect again. If still nothing appears there, try to close the FlipCam Updater and reopen it again. If v1.0 still appears, try to connect to a different local wifi network (even your mobile hotspot) with stronger signal connectivity if possible when doing the update.

